


# Wabash Communications Remote Control Guide

Contact us at 618-665-3311 or visit [www.wabash.net](http://www.wabash.net) for more information.

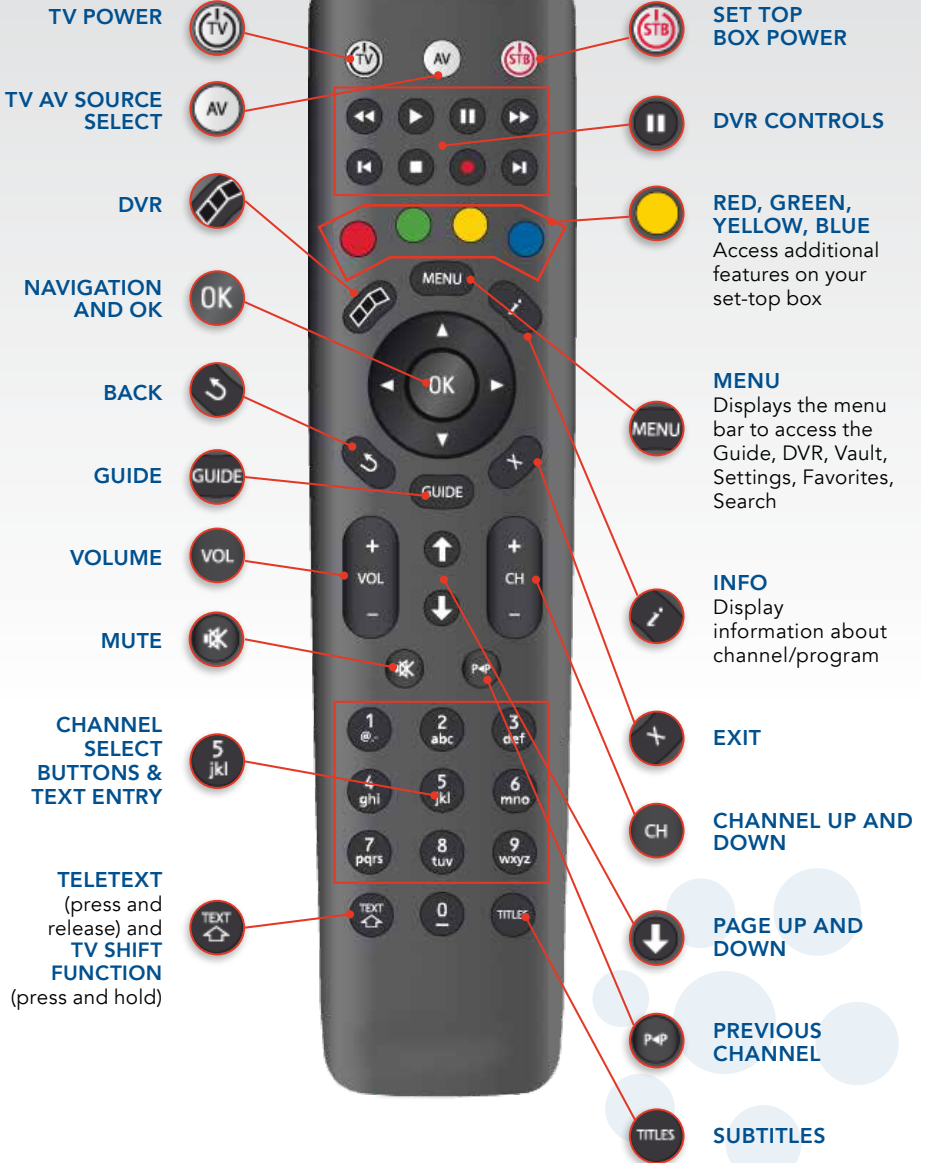

Note: Some button functionality (ex: DVR) may not be available dependent on services subscribed to.  
\*These buttons will control the TV functions in both TV mode and STB mode, once configured to operate your TV set.

# Wabash Communications DVR Quick Start Guide



## RECORD A SHOW

### RECORD LIVE TV

Record the show you are watching by pressing the **RECORD** button. The show will be recorded until it is scheduled to finish. To manually stop the recording before it is scheduled to finish, press **STOP**.

### RECORD FROM GUIDE

Use the **GUIDE** to navigate to the show you want to **RECORD**. Press the **RECORD** button to record the show.

### RECORD BY SEARCH

Navigate to the Infobar by pressing the **MENU** button, highlight the **SEARCH** icon, and press **OK**. Enter the letters of a show's title using the on-screen keyboard and press **DONE**. Arrow down and highlight **SEARCH GUIDE** and press **OK**. Select **EXTENDED** and press **OK**. Navigate to the program you want to record, highlight it, and press **OK**. Arrow down to **RECORD PROGRAM** for a one-time recording and press **OK**. Or arrow down and highlight **RECORD SERIES** to record all episodes of the show.

## VIEW A SHOW

Press the **DVR** button on your remote control to launch the DVR menu. Navigate to the show you want to view. Press **OK**, **PLAY RECORDING** will be highlighted, press **OK** again to view the show. Press **FAST FORWARD** to advance the program. Press **FAST FORWARD** repeatedly to change the fast forward speed by 4, 15, 60, or 300 times. **RAPID FAST FORWARD** will advance the program 30 seconds. Press **REWIND** to reverse the program. Press **REWIND** repeatedly to change the rewind speed by 4, 15, 60 or 300 times. **RAPID REWIND** will rewind the program 60 seconds.

## CREATE A SERIES RECORDING

Use the **GUIDE** to navigate to the show you want to record. Highlight the show and press **OK**. Highlight the option **RECORD SERIES** and press **OK**. Press **OK** again and highlight **EDIT SERIES RECORDING** and press **OK**. This menu allows you to choose if you want to record All or New Only episodes to skip re-runs. You can also edit start and stop times for a series recording.

## DELETE A SHOW

Press the **DVR** button on your remote control to launch the DVR menu. Navigate to the show you want to delete. Highlight **DELETE RECORDING** and press **OK**.

## CONTROL LIVE TV — ON THE TV CONNECTED TO THE DVR BOX.

Press **PAUSE** to pause the program. Programs can be paused for up to 30 minutes as long as the current channel is not changed. To resume watching the program, press **PLAY**. Press **REWIND** to reverse live TV or a recorded program. Press **REWIND** repeatedly to change the rewind speed by 4, 15, 60 or 300 times. **RAPID REWIND** will reverse live TV 60 seconds. Follow the same process to **FAST FORWARD** live TV that has been paused.

## LOCK A RECORDING

This will insure that the recording is not deleted when the storage space becomes limited. Press the **DVR** button on your remote control to launch the DVR menu. Navigate to **RECORDINGS**. Press **OK**. Navigate to the show you would like to save and press **OK**. Select **LOCK** and press **OK**.

*NOTE: The DVR is not intended to be a long-term storage device. Keep in mind that once you reach your space limitation maximum, older shows will be deleted.*